

## UNDERGLAZE TRANSFER INSTRUCTIONS



1 Begin by cutting the transfer into the desired size you wish to apply.




2 Place the transfer on the surface of your green ware. Use a damp sponge, run across the surface of the transfer to add little moisture to the clay.




3 Burnish the surface of the transfer with a rubber rib.



4 Before the sheet is dry, carefully remove decal by slowly peeling from the corner to reveal the entire print.

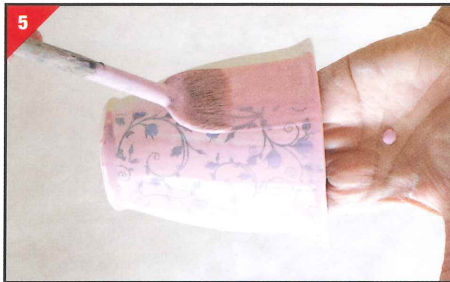

5 Bisque fire your pottery. After bisque firing, apply any zinc free celadon glaze.

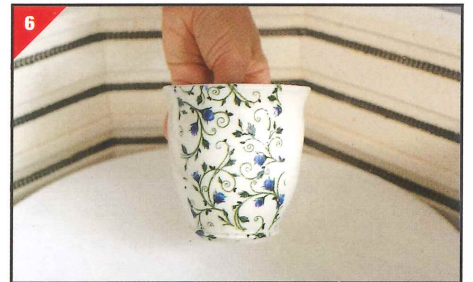


6 Once dry, fire to the recommended temperature based on your glaze. The underglaze transfer can be fire from cone 04 - cone 11


VIDEO TUTORIAL 

[www.chinaclayart.com/blogs/tutorial](http://www.chinaclayart.com/blogs/tutorial)

## OVERGLAZE DECAL INSTRUCTIONS

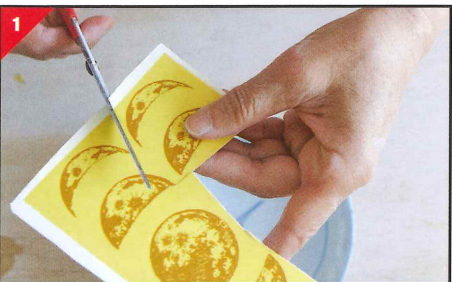

1 Begin by cutting the decal into the desired size you wish to apply.

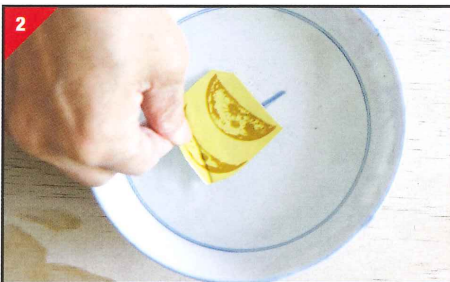


2 Soak your decal in room temperature water for 30 - 90 seconds. This will help the decal image separate from the cardboard backing.



3 Place the decal on top of your pottery and gently slide off of the cardboard backing.



4 Using a paper towel remove any water and air bubble from the decal surface.

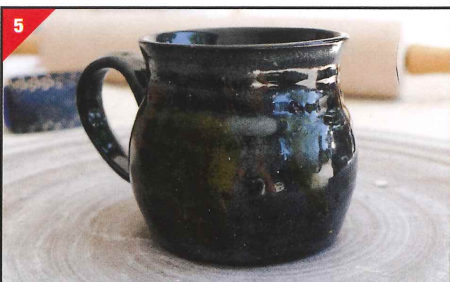

5 Let it air dry for 4-6 hours.



6 Once dry you will fire your pottery at cone 019. At slow firing speed. (For full color overglaze decal firing temperature: Cone 017 - 018)

VIDEO TUTORIAL 

[www.chinaclayart.com/blogs/tutorial](http://www.chinaclayart.com/blogs/tutorial)

